


Tip Speed — Noise Gate (≤ 100 m/s)

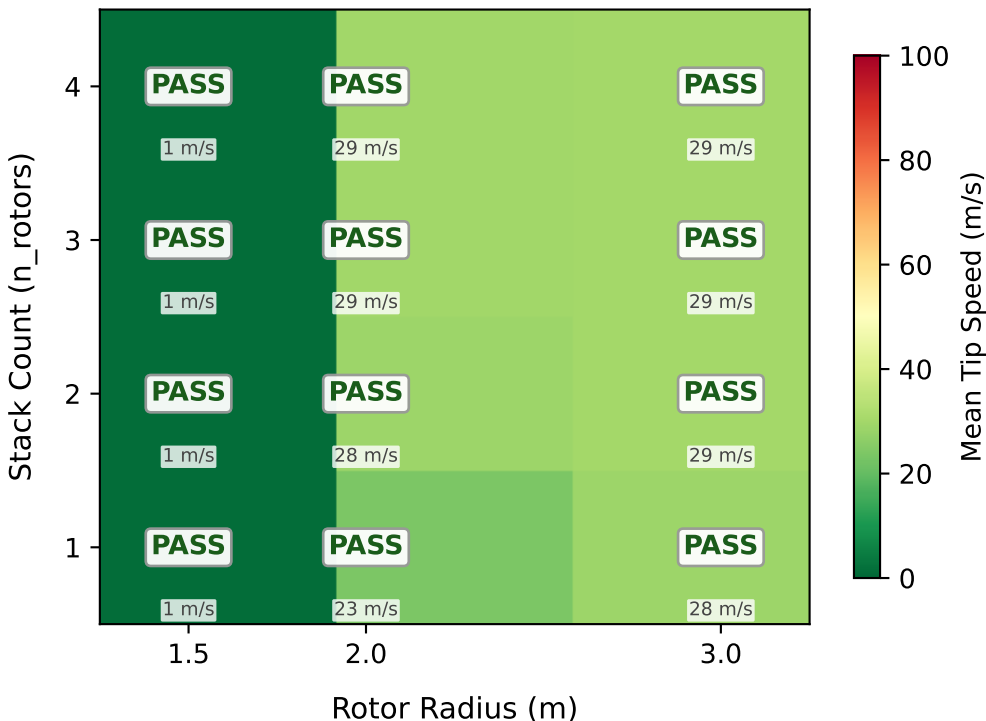

IMPLICATIONS: All configurations stay well below 100 m/s tip speed. Maximum tip speed across the sweep is ~ 39 m/s ($R=3.0$ m, $N=4$ at 12 m/s). Tip speed saturates in the 20–39 m/s range for $R \geq 2.0$ m. $R=1.5$ m is stalled at 1–2 m/s. Noise is not a limiting factor. Data: BEM v2.1, corrected polygon solver. See SPEC.md §6.6.